




**GOLDENWING**

DARE TO BE DIFFERENT

# INSTALLATION PROCESS

# ATV 125CC

**2022**

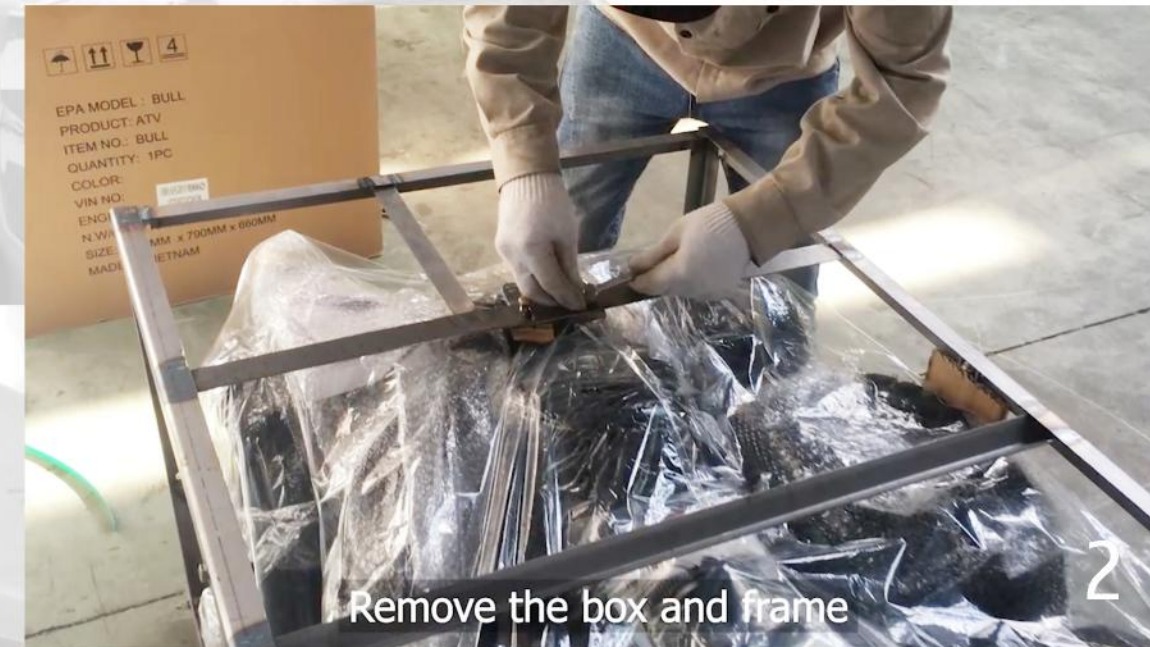

1. Remove the carton box
2. Remove the bolts attached to handlebar of ATV body
3. Remove the bolts at under corners of frame
4. Take frame to out





Remove the coating

5



Move the tires out

6



Steering wheel assembly

7



Attention balance the handle bar

8

5. Remove the warp on ATV
6. Take and put tires to the side ( empty place) and arrange the ATV in the predetermined direction
7. Remove the wrap for handlebar
8. Install upper clamp into handlebar and attach them into Lock nut hex-flange.  
Move handlebar to balance point/ Then tighten the bolts to sufficient force.





Take rear rack from steel frame

9



Remove the coating

10



Install the front rack and front bumper

11



Install the front rack and front bumper

12

9. Take front/rear rack from steel frame
10. Remove the warp on front/rear rack
11. Install the front rack
12. Install the bolt under the front plastic frame





Install the front rack and front bumper



Install the front rack and front bumper



Install the front rack and front bumper

- 13. Remove the bolts at Front bumper place
- 14. Install front bumper connect to front rack by bolts
- 15. Tighten all bolts on the front rack and front bumper place.





16. Take the rear rack and frame battery from rear ATV to out.

17. Take the bolts to out from rear rack

18-19. Install the rear rack and then tighten the all bolts on rear rack system






Install the battery

20



Install the battery

21

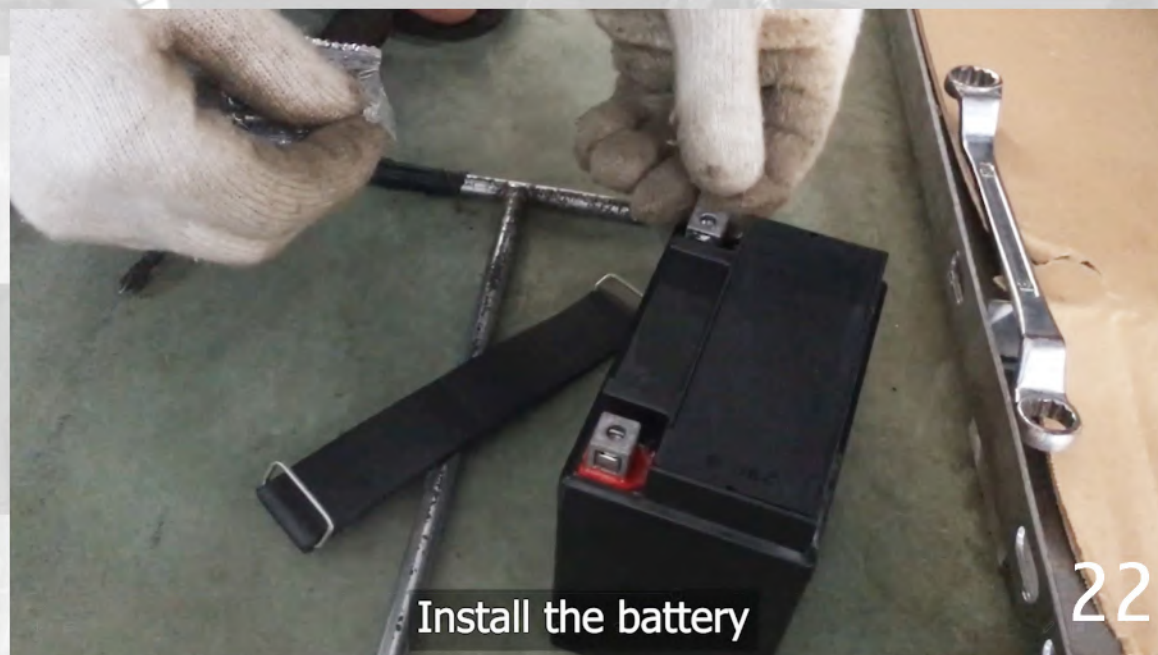

Install the battery

22



Attention to install the correct polarity of the battery  
(Red to red / black to black)

23

20. Remove the 2 bolts on the left rear ATV to install the battery

21. Install the battery's frame to body ATV

22. Install 2 nut into 2 poles on the battery

23. Install 2 line red-black into 2 pole ( negative - positive )

Attention: install negative pole to negative pole (black) and positive pole to positive pole (red)  
and install belt for battery





Remove the bolts and steel belt from rear axle

24



Remove the bolts and steel belt from rear axle

25



Move the atv to a new place

26



Install the steering tie-rod / Front wheels system

27

- 24-25. Remove the bolts and steel belt from rear axle to install tires system.
- 26. Move the atv to a new place (Need 2 peoples to do it)
- 27. Install the steering tie-rod / front wheels system.







Install the steering tie-rod / Front wheels system 28



Install to rear wheels / Again for the symmetrical wheel 29



Install to rear wheels / Again for the symmetrical wheel 30



Install to rear wheels / Again for the symmetrical wheel 31

28. install the steering tie-rod into the front axle system of the tires

29. Remove the cotter pin from rear axle system

30. Remove the flat washer, dust cover and castle nut from rear axle


31. Install the rear tires into rear axle. Then Install the flat washer, dust cover and castle nut into rear axle

When you pump to tires , attention to the recommended dosage of the manufacturer





Install to front wheels / Again for the symmetrical wheel

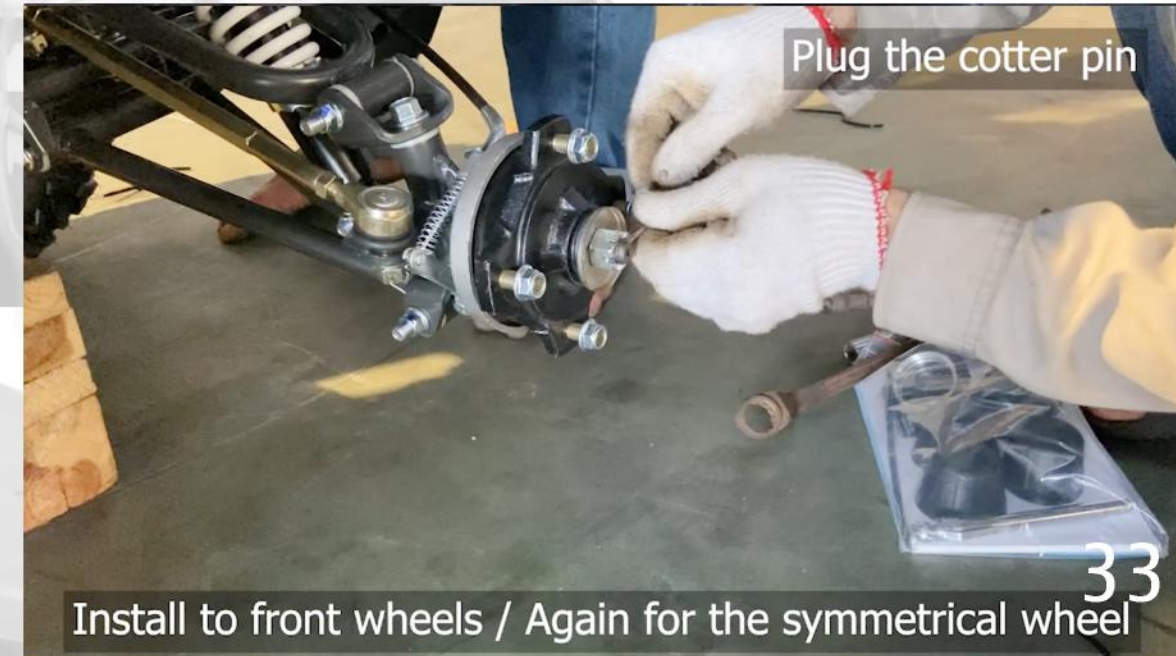

Install to front wheels / Again for the symmetrical wheel



Install to front wheels / Again for the symmetrical wheel



Install to front wheels / Again for the symmetrical wheel

32-33. Install castle nuts into front axle system and then plug the cotter pin  
34-35. Take out the bolts from front axle system and then install tires into front axle system  
Attention : Tighten the all bolts in the front wheels system.





Install rim cover for four wheels

36



Install rim cover for four wheels

37

- 36. Remove the wrap to install rim cover plastic for four wheels system
- 37. Install rim cover plastic into rim wheels system





Refueling (Gasoline)

38




Turn on the key switch / hand smart key and turn on the red switch on the left handlebar

39



Squeeze & keep the left brake then pressing the red start button on the left handlebar to start the engine

40

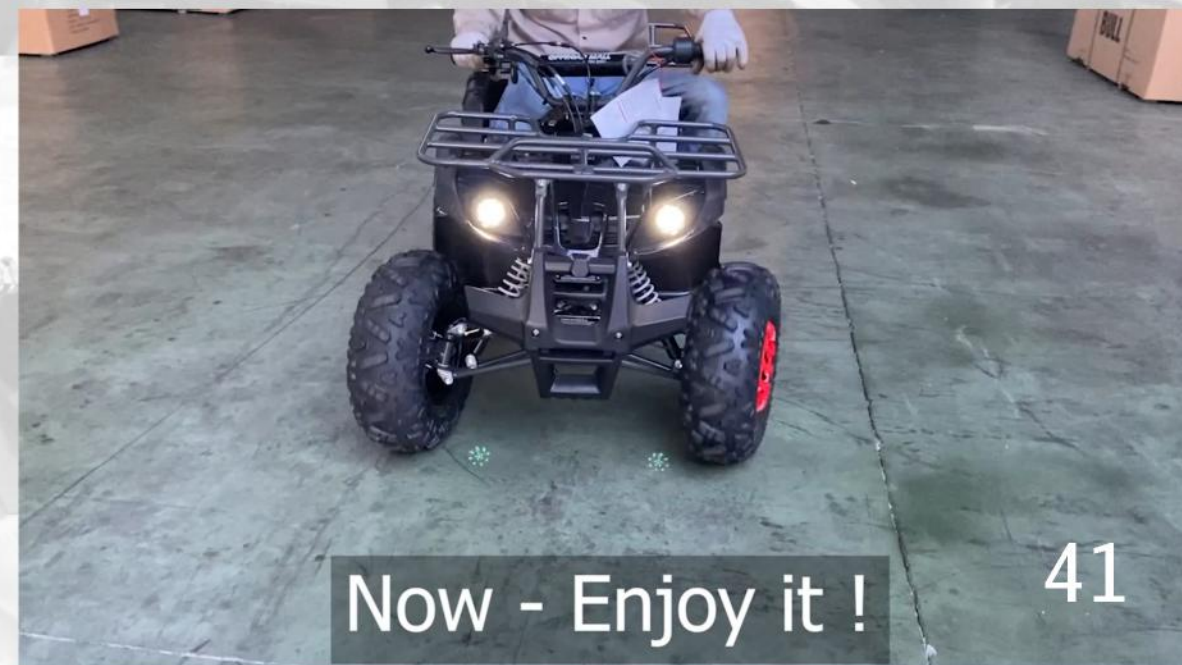

Now - Enjoy it !

41

38. Refueling (Gasoline)

39. Turn on the key switch / hand smart key and turn on the red switch on the left handlebar

40. Squeeze & keep the left brake then pressing the red start button on the left handlebar to start the engine.

41. Finally - Congratulations and enjoy it

