BEFORE YOU BEGIN

Remove contents from box. Remove the plastic separators that protect the components from damage during shipping. Inspect the contents of the box for scratches in the paint, dents or kinked cables that may have occurred during shipping. Because the Mototec Mooed is 95 percent assembled and packed at the factory, there should not be any problems, even if the box has a few scars or dents.

Estimated Assembly and Set-Up Time

Mototec recommends assembly by an adult.

Allow up to 15 minutes for assembly.

Allow up to 18 hours for initial charge (see page 3 for charging information).



WARNING:

DO NOT USE NON-MOTOTEC PRODUCTS WITH YOUR MOTOTEC MOPED.


The Mototec Mpoed has been built to certain Mototec design specifications The original equipment supplied at the time of sale was selected on the basis of its compatibility with the frame, fork and all other parts. Certain aftermarket products may or may not be compatible.

ASSEMBLY AND SET-UP

Charging the Battery

Your Mototec Mpoed may not have a fully charged battery; therefore it is a good idea to charge the battery prior to use.

- · Initial charge time: 18 hours
- · Recharge time: up to 12 hours
- . Run time: Up to 30 minutes of continuous ride time
- · Average battery life: 250 charge/discharge cycles

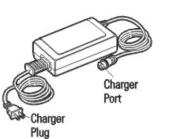

depending on the level of depletion





1 Turn power OFF before charging. Plug the charger into the charger port.

Note: Be sure to properly align the groove on the charger input plug with the corresponding socket on the case; otherwise, no charging action will occur.

2 Plug the charger into a wall outlet. If the lights on charger do not light up, check the power to the outlet. If necessary, try a different outlet.

designed to inflate high-volume automobile tires. If you decide to use such an air supply to inflate your Pocket Mod tires, first make sure the pressure gauge is working, then use very short bursts to inflate to the correct PSI. If you inadvertently over-inflate the tires, release the excess pressure immediately.

Note: The pressurized air supplies

found at gasoline stations are



Rechargeable batteries are only to be charged under adult supervision. Always disconnect your Mototec Mpoed from the charger before cleaning with liquid.

Note: If your charger does not look like the one illustrated, your unit has been supplied with an alternative charger. The specifications and charging procedure would not change.

The charger has a small window with one LED or two LEDs to indicate the charge status. Refer to the illustration on the charger unit for the actual "charging" and "charged" status indications for your model charger.

Chargers have built-in over-charge protection to prevent battery from being over-charged.

Required Tools



3mm (Daisy only), 5mm and 6mm key wrenches (Included) 2.5mm key wrench (Not included)



14mm (Daisy only) and15mm wrenches (Included) 8mm and 10mm wrenches (Not Included)



Spoke tightener (Included)



Bicycle-style tire pump for Schrader valve tires, with pressure gauge (Not Included)



Phillips screwdriver (Not Included)